







- IMX273 CMOS sensor
- 1.6 MP resolution
- ALVIUM image processing
- FPD-Link III interface
- Various hardware options

Model without hardware options

Robust CSI-2 based Alvium cameras with FPD-Link III interface

Benefit from greater flexibility in cable lengths

Alvium FP3 STP cameras with FPD-Link III (Flat Panel Display Link) interface have been designed to overcome the limitations of standard CSI-2 cameras. The closed housing CSI-2 based cameras come with integrated serializer and a rugged HSD STP connector for cable lengths up to 10 meters. This connection can also be used to power cameras (Power over STP), enabling single cable solutions.

To operate Alvium FP3 cameras on your vision system, Allied Vision provides different access modes: - GenlCam for CSI-2 Access controls the camera by GenlCam features, using the Alvium CSI-2 driver and CSI-2 transport layer (TL) directly. All Alvium FP3 STP models with equivalent 1800 C models are supported. Please find FAQs and installation instructions in the Getting Started with GenlCam for CSI-2 application note. - Direct Register Access (DRA) to control the cameras via registers for advanced users. - Video4Linux2 Access allows to control the cameras via established V4L2 API and applications like GStreamer and OpenCV. Open-source CSI-2 drivers are available on GitHub for different boards and systems on chip (SoCs).

In addition to lens mount and housing options, see Customization and OEM Solutions webpage for additional options.



Specifications

Interface	FPD-Link III, based on MIPI CSI-2, up to 4 lanes
Resolution	1456 (H) × 1088 (V)
Spectral range	300 to 1100 nm
Sensor	Sony IMX273
Sensor type	CMOS
Shutter mode	GS (Global shutter)
Sensor size	Type 1/2.9
Pixel size	3.45 μm × 3.45 μm
Lens mounts (available)	C-Mount, CS-Mount, S-Mount 157
Max. frame rate at full resolution	Mainly Mainly depends on hardware and register settings.
ADC	12 Bit
Image buffer (RAM)	256 KByte
Non-volatile memory (Flash)	1024 KByte

Imaging performance

Imaging performance data is based on the evaluation methods in the EMVA 1288 Release 3.1 standard for characterization of image sensors and cameras. Measurements are typical values for monochrome models measured without optical filter.

Quantum efficiency at 529 nm	64 %
Temporal dark noise	2.1 e ⁻
Saturation capacity	10400 e ⁻
Dynamic range	72 dB
Absolute sensitivity threshold	2.7 e ⁻

Output	
Bit depth	12-bit
YUV color pixel formats	YUV422 8-bit (UYVY) [MIPI CSI-2 (FOURCC)]
RGB color pixel formats	RBG888 (RGB3) [MIPI CSI-2 (FOURCC)]
Raw pixel formats	RAW8 (GREY), RAW10 (Y10), RAW12 (Y12) [MIPI CSI-2 (FOURCC)]




General purpose inputs/outputs (GPIOs)

TTL I/Os

2 programmable GPIOs

Operating conditions/dimensions	
Operating temperature	-20 °C to +65 °C (housing)
Power requirements (DC)	5 VDC over MIPI CSI-2
Power consumption	Value for the integrated serializer adds to CSI-2 model value.
Mass	70 g
Body dimensions (L × W × H in mm)	41 × 29 × 29

Quantum efficiency

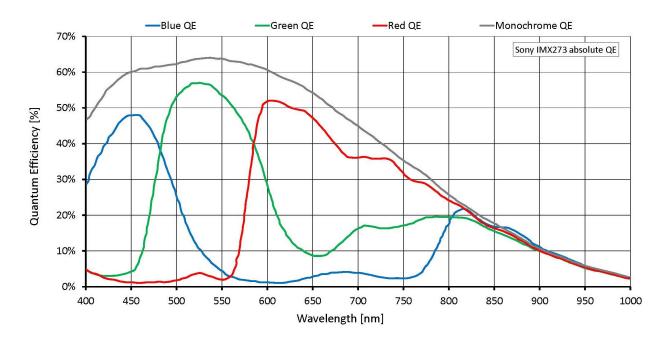



Features

Image control: Auto

- Auto exposure
- Auto gain
- Auto white balance (color models)

Image control: Other


- Black level
- Color transformation (incl. hue, saturation; color models)
- De-Bayering up to 5×5 (color models)
- DPC (defect pixel correction)
- FPNC (fixed pattern noise correction)
- Gamma
- Reverse X/Y
- ROI (region of interest)


Camera control


- Acquisition frame rate
- Firmware update in the field
- I/O and trigger control
- Temperature monitoring




Technical drawing

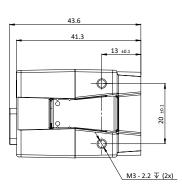

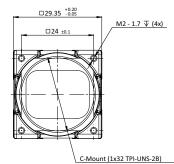

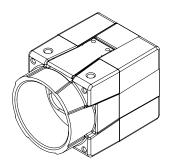

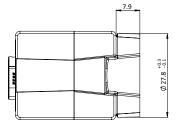

13 ±0.1

20 ±0.1

M3 - 2.2 ∓ (2x)

 \odot

Ò

