





Model without hardware options

## **Alvium** GM2-2050 STP

- IMX183 CMOS sensor
- 19.7 MP resolution
- ALVIUM image processing
- GMSL2 interface
- Various hardware options

#### Robust CSI-2 based Alvium cameras with GMSL2 interface

Benefit from greater flexibility in cable lengths

Alvium GM2 STP cameras with GMSL2 (Gigabit Multimedia Serial Link) interface have been designed to overcome the limitations of standard CSI-2 cameras. The closed housing CSI-2 based cameras come with integrated serializer and a rugged HSD STP connector for cable lengths up to 8 meters. This connection can also be used to power cameras (Power over STP), enabling single cable solutions.

To operate Alvium GM2 cameras on your vision system, Allied Vision provides different access modes: - GenlCam for CSI-2 Access controls the camera by GenlCam features, using the Alvium CSI-2 driver and CSI-2 transport layer (TL) directly. All Alvium GM2 models with equivalent 1800 C models are supported. Please find FAQs and installation instructions in the Getting Started with GenlCam for CSI-2 application note. - Direct Register Access (DRA) to control the cameras via registers for advanced users. - Video4Linux2 Access allows to control the cameras via established V4L2 API and applications like GStreamer and OpenCV. Open-source CSI-2 drivers are available on GitHub for different boards and systems on chip (SoCs).

In addition to lens mount and housing options, see Customization and OEM Solutions webpage for additional options.



Specifications	
Interface	GMSL2, based on MIPI CSI-2, up to 4 lanes
Resolution	5376 (H) × 3672 (V)
Spectral range	300 to 1100 nm
Sensor	Sony IMX183
Sensor type	CMOS
Shutter mode	RS, Global reset shutter (GRS)
Sensor size	Type 1
Pixel size	2.4 μm × 2.4 μm
Lens mounts (available)	C-Mount
Max. frame rate at full resolution	Mainly depends on hardware and register settings.
ADC	10 Bit
Image buffer (RAM)	256 KByte
Non-volatile memory (Flash)	1024 KByte

## Imaging performance

Imaging performance data is based on the evaluation methods in the EMVA 1288 Release 3.1 standard for characterization of image sensors and cameras. Measurements are typical values for monochrome models measured without optical filter.

Quantum efficiency at 529 nm	80 %
Temporal dark noise	6 e <sup>-</sup>
Saturation capacity	14900 e <sup>-</sup>
Dynamic range	65 dB
Absolute sensitivity threshold	7.9 e <sup>-</sup>

Output	
Bit depth	10-bit
Monochrome pixel formats	GenlCam for CSI-2 Access: Mono8, Mono10, Mono10p
YUV color pixel formats	YUV422 8-bit (UYVY) [MIPI CSI-2 (FOURCC)]   GenICam for CSI-2 Access: YCbCr411_8_CbYYCrYY, YCbCr422_8_CbYCrY, YCbCr8_CbYCr
RGB color pixel formats	RBG888 (RGB3) [MIPI CSI-2 (FOURCC)]   GenICam for CSI-2 Access: BayerRG8, BayerRG10, BayerRG10p, BGR8, RGB8



Raw pixel formats


RAW8 (GREY), RAW10 (Y10) [MIPI CSI-2 (FOURCC)]

## General purpose inputs/outputs (GPIOs)

TTL I/Os 2 programmable GPIOs

Operating conditions/dimensions	
Operating temperature	-20 °C to +65 °C (housing)
Power requirements (DC)	5 VDC over MIPI CSI-2
Power consumption	Value for the integrated serializer adds to CSI-2 model value
Mass	70 g
Body dimensions (L $\times$ W $\times$ H in mm)	41 × 29 × 29

## Quantum efficiency

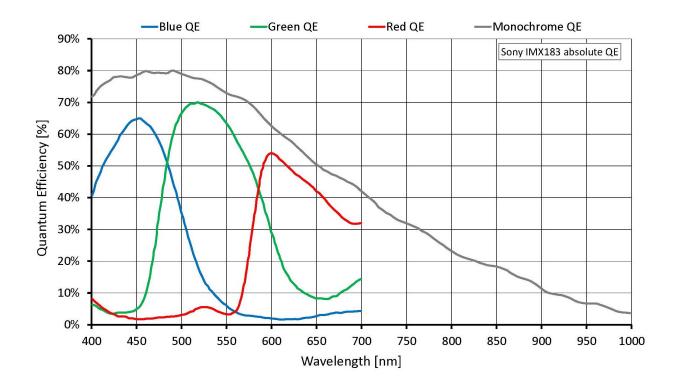



## Features

## Image control: Auto

- Auto exposure
- Auto gain
- Auto white balance (color models)

## Image control: Other

- Adaptive noise correction\*
- Binning\*
- Black level
- Color transformation (incl. hue, saturation; color models)
- Contrast\*
- Custom convolution\*
- De-Bayering up to 5×5 (color models)
- DPC (defect pixel correction)
- Gamma
- LUT (look-up table)\*
- Reverse X/Y
- ROI (region of interest)
- Sharpness/Blur\*

### Camera control

- Acquisition frame rate
- Bandwidth control\*
- Counters and timers\*
- Firmware update in the field
- I/O and trigger control
- Serial I/Os\*
- Temperature monitoring
- User sets\*

<sup>\*</sup>GenICam for CSI-2 Access



# Technical drawing

