

Affected Product PCN Title PCN No.	Manta camera series Manta type B housing material chang 2015-03-02	e PCN Issue date	2015-August-25
Contact	mailto:pcn@alliedvision.com		
Type of change			
 Regulatory / Compli Mechanical Specific Electrical Specificati Optical Specification 	ation Accessories Specification DISC (Discontinued)		
Affected products			
All Manta type B cameras with housing (G-223 / 235 / 282 / 283 / 419 / 505 / 609 / 917).			

Reason for change


Change of manufacturing process.

Change description

In order to use the same production processes, the Manta type B models will receive a new housing material (aluminum \rightarrow zinc), as already used in the Manta Type A models.

By using the material zinc with its different properties, e.g. the overall weight of the camera is increased by approximately 50g.

The conjunction of the two cover shells will be in a different position, as well as the position of the serial number label compared to the previous process.

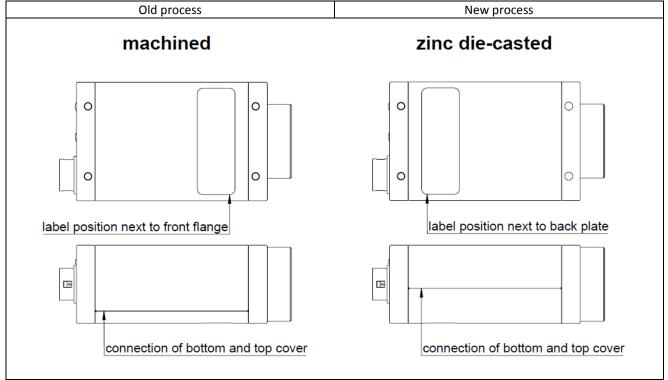

No change in outer dimensions, surface and function.

The change is implemented since 2015-August-25. From this date on, all cameras are produced with the new housing material.

First serial number with the change: 503362763.



Last time buy date

n/a

Last time ship date

n/a

Customer action request

Adopt drawings and documentation, where applicable.